



# Magnetospeed

TOOLS FOR THE MODERN MARKSMAN™

## QUICK TROUBLESHOOTING GUIDE


For additional information and further troubleshooting, please refer to the full instructions.


**\*PLEASE READ BEFORE PROCEEDING\***

**CAUTION:** Make sure firearm is unloaded and safe before proceeding.

**WARNING:** The thumbnut must be reset to the very bottom of the threads before mounting the Sporter bayonet to the barrel. Failure to do so may result in bayonet moving under recoil and damage occurring to the bayonet and firearm. This especially applies to rifle barrels with matching contour muzzle brakes and with no muzzle brakes. Damage caused by a loose bayonet is NOT covered under warranty.

### Mount

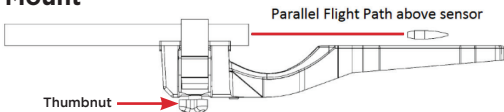

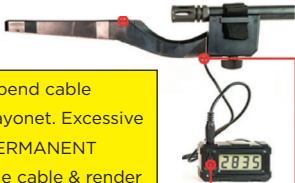

**CAUTION:** Do not bend cable where it meets the bayonet. Excessive bending can cause PERMANENT internal damage to the cable & render the bayonet inoperable.

\*Do not bend at this point.

**Error 2/No Readings and stuck on the ready screen;**



This is not a cable issue. This is a spacing and sensitivity setting. Double check your spacing and alignment. See below for sensitivity setting guide.

**\*SENSITIVITY SETTINGS based on caliber**

re9	<b>Regular Sensitivity</b>	Supersonic: .30 caliber and above
HI 1	<b>High 1 Sensitivity</b>	Supersonic: .284 to .223 calibers. Subsonic: .30 caliber
HI 2	<b>High 2 Sensitivity</b>	Super/subsonic: .223 to .17 calibers. *22LR barrel diameter cannot exceed .850"

\*Please refer to **DISPLAY OPERATIONS** in the Instruction Manual to change sensitivity settings.

**CAUTION:** Sporter display will hold 99 continuous shots. On the 100th shot, all 99 previous shots will be deleted, and the display will reset back to zero shots.